



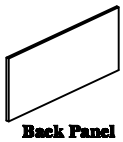
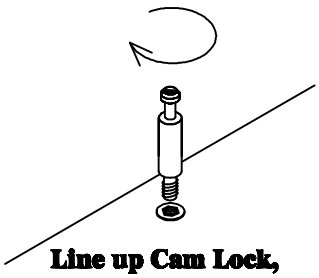
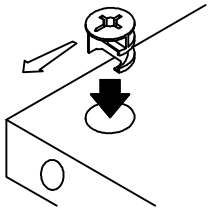
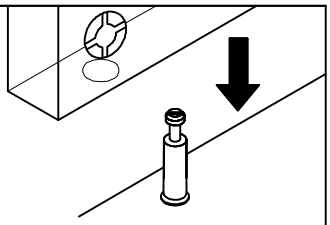
PL 189GG
CURVED TOP DESK


Thank you for purchasing the Performance Curved Top Desk.
Please follow these instructions for easy assembly.

A	B	C	D	E	F	G	H
							
Cam Lock 13 Pcs	Klix Cam 13 Pcs	Housing Cap (Long) 6 Pcs	Housing Cap (Short) 7 Pcs	Adjustable Glide 4 Pcs	6 Hole L-Bracket 5 Pcs	Screw #6 x ⅝" 30 Pcs	M4 x 65 Allen-Key 1 Pc

1	2	3
		
Top Panel	Side Panel x 2	Back Panel

KLIX CAM INSTRUCTIONS

1	2	3
		
Line up Cam Lock, turn clockwise.	Insert the cam with the arrow pointing towards the hole in the edge.	Insert the Cam Lock into Klix Cam. Turn Klix Cam to lock.

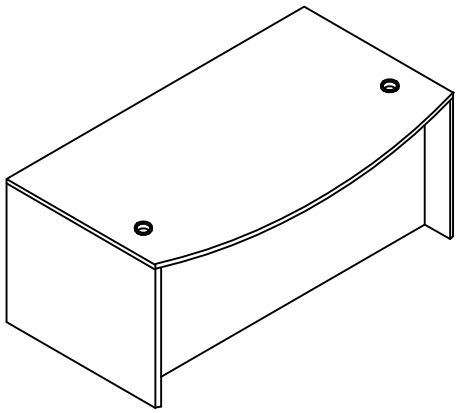

IMPORTANT !

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Check that you have all parts and hardware.
- Remove all wrapping materials, including staples & packing straps before you start to assemble.
- Do not tighten any screws or bolts until the unit is completely assembled.
- Keep all hardware parts out of reach of children.